



# TECHNICAL DATA SHEET



**Henkel Corporation**  
Professional and Consumer Adhesives  
Rocky Hill, CT  
Phone 1-800-624-7767  
Fax (440) 250-7873  
[www.henkel.com](http://www.henkel.com) [www.osipro.com](http://www.osipro.com)

## DESCRIPTION:

OSI® TRIMTeQ™ TEQ Fasteners™ Screws & Plugs is specifically designed to fasten cellular pvc trim to the home. It features the Cortex™ concealed fastening system that is virtually invisible providing the professional finish that homeowners expect. TRIMTeQ™ fasteners offer the highest level of connection strength while also creating a consistently cored hole for the plug connection. The setting tool is engineered to ensure that the fasteners are set to the correct depth every time and attaches easily to the most popular drills. Each Universal PVC plug has been engineered to ensure ultimate long term performance against outdoor elements and will maintain long term durability under any conditions.

## RECOMMENDED FOR:

Designed to fasten cellular PVC trim to the home & fill holes

## FEATURES & BENEFITS:



Item #	Package	Contents
1464016	Box	2 = Setting Tools 150 = 2 3/4" screws 200 = PVC Plugs

Feature	Benefits
Features the Cortex™ Concealed Fastening System.....	Virtually Invisible installation
Fast and Easy.....	No more caulking, sanding or painting
Strong Connection.....	Cortex™ Fasteners offer higher withdrawal values than nails
Paintable.....	Invisible installation
Setting Tool.....	Engineered to ensure fasteners are set to the correct depth
Universal PVC Plugs.....	Manufactured out of PVC trim and provides long term durability

## COVERAGE:


The contents of one box will cover the installation of 100 linear feet of PVC trimboard.

### Box Contents:

Setting Tools = 2

2 3/4" Screws = 150 pieces

PVC Plugs = 200

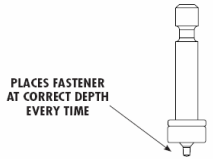

FULLY TESTED AND ENGINEERED TO YIELD ULTIMATE LONG-TERM PERFORMANCE

## INSTALLATION:

### **Installation Instructions:**

1. Using a high voltage impact driver with the setting tool, drive the fastener to the preset level below the trim surface. The fastener must be driven perpendicular to the surface.
2. Place the plug into the hole with the trim surface side up and gently tap until it is flush with the trim. The cored hole must be free of debris or moisture

*Tip: Ensure that the head of the fastener is flat with the trim surface to eliminate potential marring.*

### **Important Information:**

1. Under some conditions, you may see a subtle indication that there is a doweled plug in the trim. It is recommended that you test the Cortex™ system on a few trim boards to ensure you approve of the final look.
2. To remove a fastener set below the trim surface, replace the setting tool in your impact driver with a #1 square drive bit, allowing full access to the seated fastener.

### **Weathering:**

TeQ Fasteners™ PVC Plugs are made of cellular PVC trimboard and will weather to a similar shade. The weathering process may take a few weeks or months depending on the specific board and the intensity of sunlight.

### **General Fastening Pattern Guidelines:**

Use two fasteners at every framing member at 16" on center or less. Use three fasteners if the board is wider than 8".

## DISCLAIMER:

The information and recommendations contained herein are based on our research and are believed to be accurate, but no warranty, express or implied, is made or should be inferred. Purchasers should test the products to determine acceptable quality and suitability for their own intended use. Nothing contained herein shall be construed to imply the nonexistence of any relevant patents or to constitute a permission, inducement or recommendation to practice any invention covered by any patent, without authority from the owner of the patent.